




An example of the *Exclusion Booming Tactic*. Actual deployment should be adjusted for local conditions.

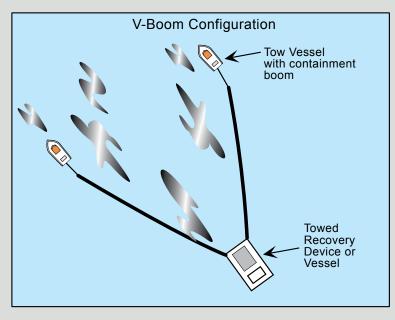

An example of the *Free-oil Recovery Tactic*.
Actual deployment should be adjusted for local conditions.

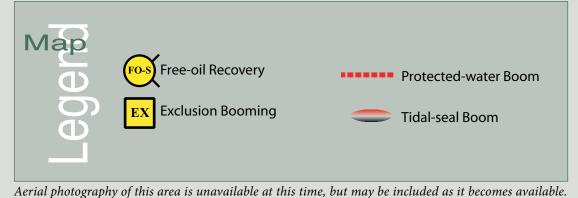

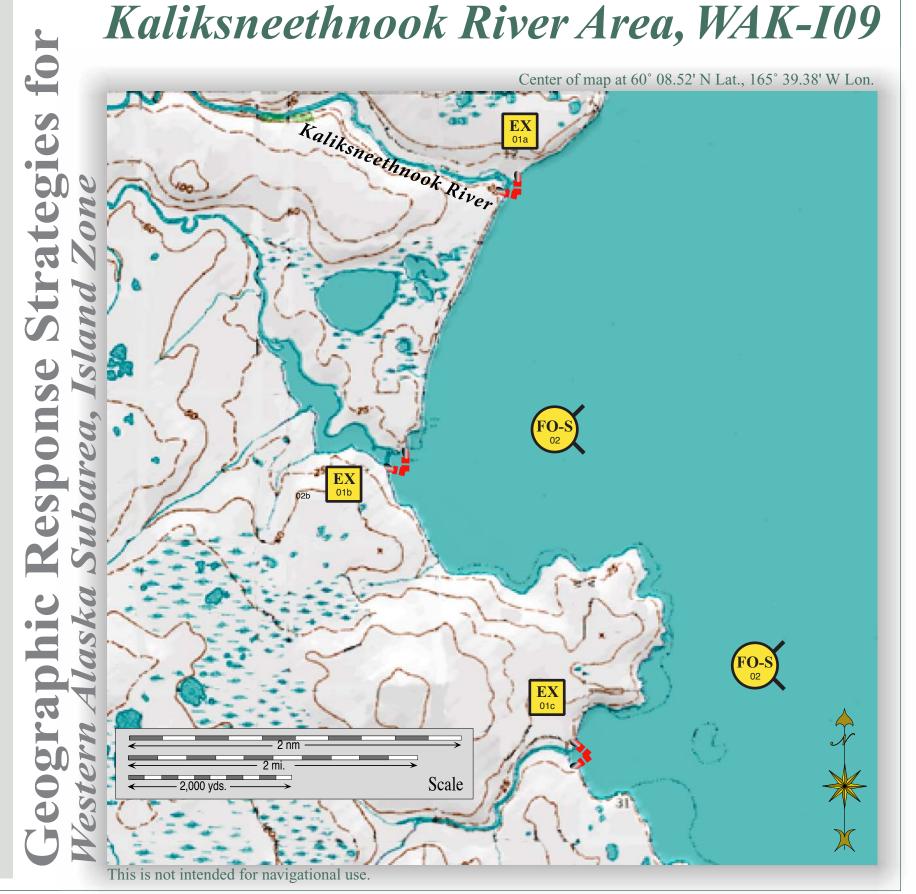

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
I-09-01  EX	Kaliksneethnook River Area a. Lat. 60° 11.34'N Lon. 165°42.22'W b. Lat. 60° 09.76'N Lon.165° 43.50'W c. Lat. 60° 08.06'N Lon. 165°41.49'W	Exclusion Exclude oil from impacting the streams in Kaliksneethnook River Area.	Deploy anchors and boom with skiffs (class 6) at high tide.  Place the protected-water boom in a chevron pattern in front of the entrance to each river. Complete the array by placing 60 ft. of tidal seal boom on each leg.  Tend throughout the tide.  Boom Lengths:  a. 500 ft  b. 800 ft  c. 400 ft.	Deployment Equipment  1700 ft. protected-water boom 360 ft. tidal seal boom 7 ea. anchor systems Vessels  1 ea. class 3 2 ea. class 6 Personnel/Shift 7 ea. vessel crew/general techs Tending Vessels  1 ea. class 3 2 ea. class 6 Personnel/Shift 4 ea. vessel crew/general techs	Vessel Platform	Via marine waters Chart 16006	Fish- intertidal spawning-salmon (June-Sept.), arctic char  Birds-waterfowl concentrations, seabird and shorebird nesting  Habitat- exposed rocky shore, gravel beaches, marsh  Human use-subsistence	Vessel master should have local knowledge.  Title 41 permitting required from ADNR.  Surveyed: not yet  Tested: not yet
I-09-02	Kaliksneethnook River Area  Nearshore waters in the general area of:  Lat. 60° 08.52'N Lon. 165°39.38'W	Free-oil Recovery  Maximize free-oil recovery in the offshore & nearshore environment of Kaliksneethnook River Area depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of the Kaliksneethnook River Area.  Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Mekoryuk	Via marine waters Chart 16006	Same as I-09-01	Vessel master should have local knowledge.  Use extreme caution, shallow waters with shifting channels and bars.